


DA

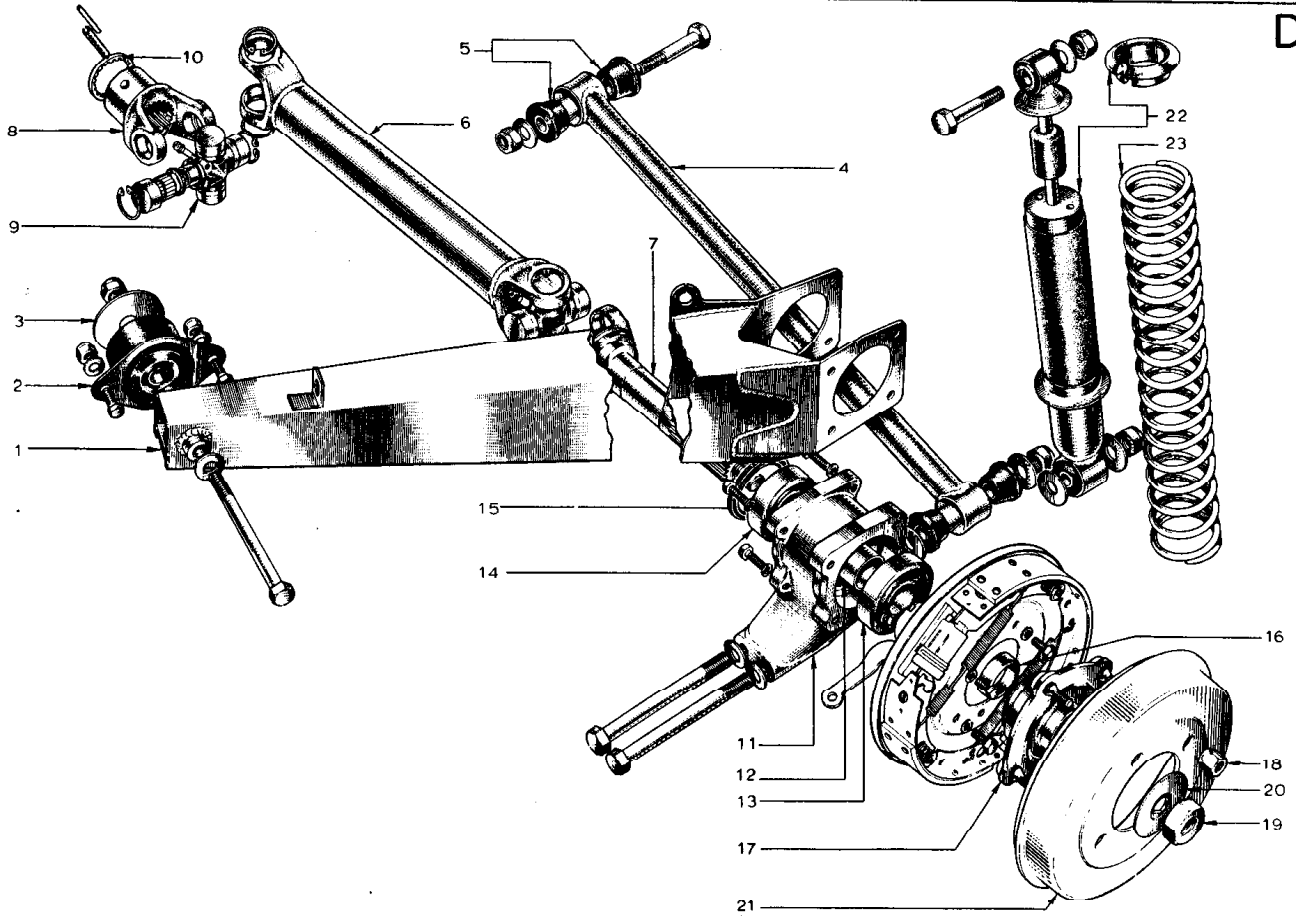

0270

IC-46PL

PLATE Ref: No.	PART No.	QUANTITY				STEERING		DESCRIPTION	CHANGE POINT	BULLETIN REFERENCE
		ALL	SI.	SI. Mk 1	S2.	S2. Fed.	RH			
DA.1.	046 D 0131	1						Radius Arm LH		
	046 D 0132	1						Radius Arm RH		
DA.2.	046 D 6000	2						Resilient Mounting		
DA.3.	A07 W 3212	2						Washer )		
	XUFB 0772	2						Bolt ) Resilient Mounting		
	YUFW 070F	2						Nut ) to Radius Arm		
	A07 W 1405	2						Washer )		
	XUFS 0516	4						Bolt )		
	YUFW 050F	4						Nut ) Resilient Mounting to Chassis		
	A05 W 1606	4						Washer )		
	026 B 0079	AR						Washer - Toe - in Adjustment		
DA.4.	046 D 0014	2						Lower Link		
DA.5.	046 D 6001	8						Bush - Lower Link		
	XUFB 0840	2						Bolt ) Lower Link to Gearbox		
	YUFW 080F	2						Nut ) Mounting Bracket		
	A08 W 2006	2						Washer )		
	XUFB 0872	2						Bolt )		
	YUFW 080F	2						Nut ) Lower Link to Rear Hub		
	A08 W 1606	4						Washer )		
	A08 W 1606	2						Washer )		
DA.6.	046 D 0015	2						Intermediate Drive Shaft		
DA.7.	046 D 0005	2						Outboard Drive Shaft		
DA.8.	046 R 6005	4						Yoke - Inboard Drive Shaft		
DA.9.	046 D 6005	4						Universal Joint		
12.70										

PLATE Ref: No.	PART No.	QUANTITY					STEERING		DESCRIPTION	CHANGE POINT	BULLETIN REFERENCE
		ALL	ST.	ST. Mk 1	S2.	S2. Fed.	RH	LH			
	046 R 0022	2							Spacer Ring		
	046 R 0023	2							Spacer Ring		
	046 R 0024	2							Spacer Ring		
	046 R 0025	2							Spacer Ring		
DA.10.	046 R 0026	2							Spacer Ring		
	046 R 6000	2							Tension Pin - Outer ) Drive shaft to		
	046 R 6001	2							Tension Pin - Inner ) Final Drive		
	A054 D 0187	AR							Shim, 0.005 ins.		
	A054 D 0188	AR							Shim, 0.015 ins.		
	046 D 0004	-							Replaced by A046 D 0004 together with 1 off A046 D 0005	Up to Chassis No. 0050	
	A046 D 0004	1							Rear Bearing Housing	From Chassis No. 0051	
	046 D 0005	-							Replaced by A046 D 0005 together with 1 off A046 D 0004	Up to Chassis No. 0050	
DA.11.	A046 D 0005	1							Rear Bearing Housing	From Chassis No. 0051	
	XUFS 0512	8							Screw ) Bearing Housing to Radius Arm		
	LO5 W 0000	8							Washer )		
DA.12.	046 D 0148	2							Spacer - Bearing to Bearing		
	036 D 6001	-							Replaced by 036 D 6017		
DA.13.	036 D 6017	2							Bearing - Outer	From Chassis No. 1643	
DA.14.	046 D 6003	2							Bearing - Inner		
DA.15.	054 D 0171	2							Seal Ring		Service III 1969/20
DA.16.	A054 D 0186	2							Spacer - Hub to Bearing		
DA.17.	046 D 0001	2							Rear Hub		
	036 D 6002	8							Wheel Stud		
DA.18.	036 D 6000	8							Wheel Nut		
DA.19.	046 D 6007	2							Hub Retaining Nut		
DA.20.	046 D 6006	2							Lock Washer		

PLATE Ref: No.	PART No.	QUANTITY					STEERING		DESCRIPTION	CHANGE POINT	BULLETIN REFERENCE
		ALL	ST.	ST. Mk 1	S2.	S2. Fed.	RH	LH			
DA.21.	046 J 6023	2							Brake Drum, Rear )		
	046 J 6024	2							Brake Drum, Rear ) Optional		
	046 D 0007	-							Replaced by A046 D 0007 in pairs	Up to Chassis No. 0254	1968/69
DA.22.	A046 D 0007	2	2	2					Rear Damper	From Chassis No. 0255 to From Chassis No. 1066 to 2583	
	046 D 0007					2			Rear Damper	From Chassis No. 2584	
	A065 D 0007					2			Rear Damper		
	046 D 6008	4							Bush - Damper		
DA.23.	026 C 0010	-							Replaced by 026 C 0010A in pairs	Up to Chassis No. 0254	
	026 C 0010A	2	2	2					Road Spring, Rear	From Chassis No. 0255 to	
	026 C 0010A					2			Road Spring, Rear	From Chassis No. 1066 to 2583	
	065 D 0010					2			Road Spring - Rear	From Chassis No. 2584	
	XUPB 0840	2							Bolt )	Up to Chassis No. 0388	
	XUPB 0844	2							Bolt ) Damper to Cross Beam	From Chassis No. 0389	
	YUFW 080F	2							Nut )		
	A08 W 1606	4							Washer )		
	XUPB 0872	2							Bolt )		
	YUFW 080F	2							Nut ) Damper to Bearing Housing		
	A08 W 1606	2							Washer )		
	A08 W 2006	4							Washer )		