

* PART of 3

* PART of 9

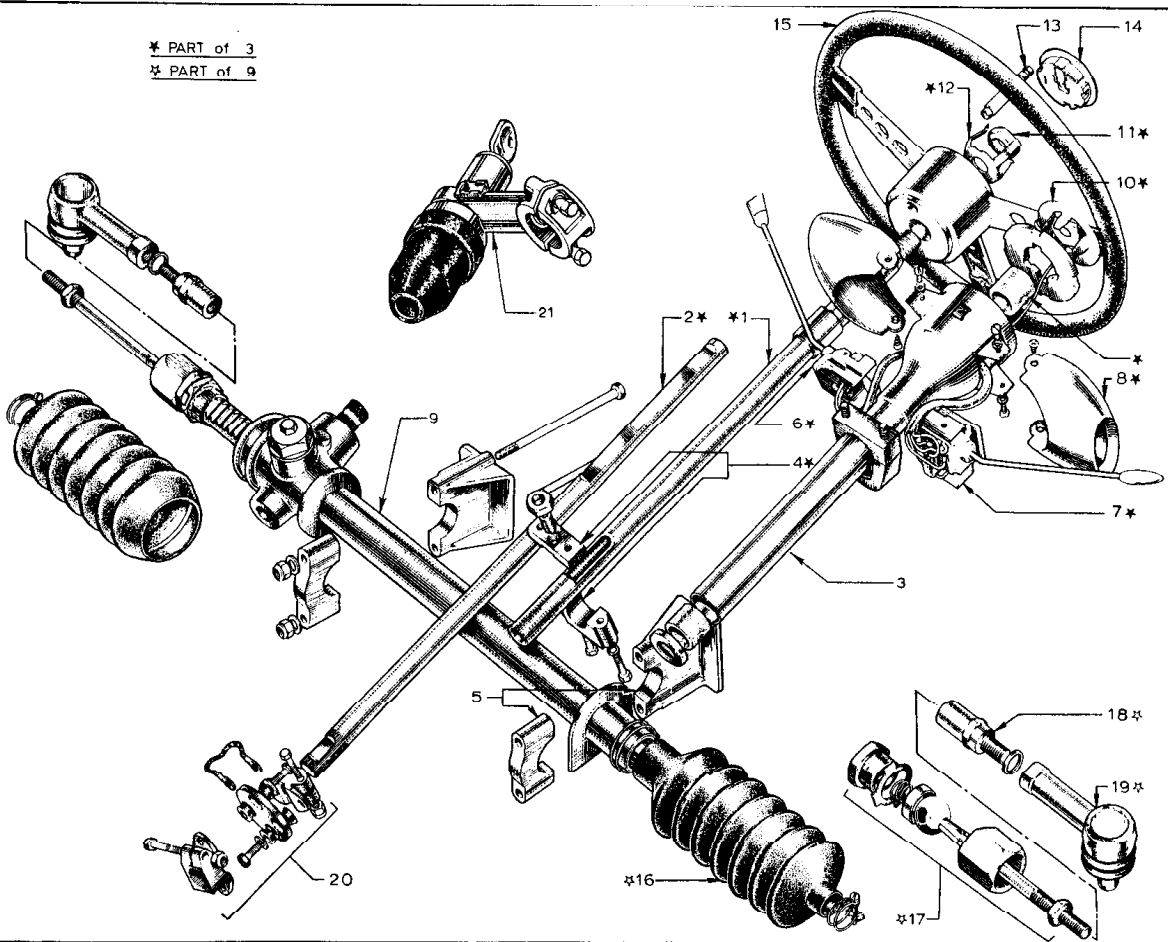


PLATE Ref. No.	PART No.	QUANTITY					STEERING		DESCRIPTION	CHANGE POINT	BULLETIN REFERENCE
		ALL	SI.	SI. Mk I	S2.	S2. Fed.	RH	LH			
HA.1.	046 H 6004	1									Inner Column - Upper
HA.2.	046 H 6005	1									Inner Column - Lower
HA.3.	A046 H 0705	1									Column Assembly (without lock)
	054 H 0723	1									Column Assembly (with lock)
	054 H 0730	1					+				Column Assembly (with lock)
	054 H 0731	1						+			Column Assembly (with lock)
HA.4.	036 H 6038	1									Impact clamp
HA.5.	046 H 0015	2									Mounting bracket - Steering unit
	XUPB 0456	4									Bolt)
	YUPN 040F	4									Nut) Mounting Bracket
	A04W 0904	4									Washer)
HA.6.	036 H 6000	1									Switch - Indicators
HA.7.	046 H 6183	1									Switch - lamps selection
HA.8.	036 H 6033	2									Escutcheon - Switches
	046 H 0703	1						+			Steering Unit
HA.9.	046 H 0704	1					+				Steering Unit
HA.10.	036 H 6009	1									Contact Plate - Horn
HA.11.	036 H 6035	1									Nut - Steering Wheel to column
HA.12.	036 H 6008	1									Clip - Horn push retaining
HA.13.	036 H 6005	1									Brush - Horn contact
HA.14.	036 H 6004	1									Horn push) optional
	036 H 6090	1									Horn push)

PLATE Ref: No.	PART No.	QUANTITY					STEERING		DESCRIPTION	CHANGE POINT	BULLETIN REFERENCE
		ALL	SI.	SI. Mk 1	S2.	S2. Fed.	RH	LH			
	028 H 0030	1							Horn button		
HA.15.	036 H 6006	1							Steering Wheel		
HA.16.	036 H 6027	2							Bellows - Steering unit		
HA.17.	046 H 6006	2							Tie-rod assembly		
	046H 6002	2							Tie-rod adaptor (replaced by)		
HA.18.	054 H 0056	2							Tie-rod adaptor)	From 1904	
	L08W 0000	2							Washer - Adaptor)		
HA.19.	036 H 6007	2							Ball Joint - Track rod		
HA.20.	036 H 6002	1							Joint - Flexible) Optional		
	050H 6012	1							Joint - Flexible)		
HA.21.	A036 H 6065				1				Lock - Steering (without buzzer)		
	A036 H 6064					1			Lock - Steering		