

LA

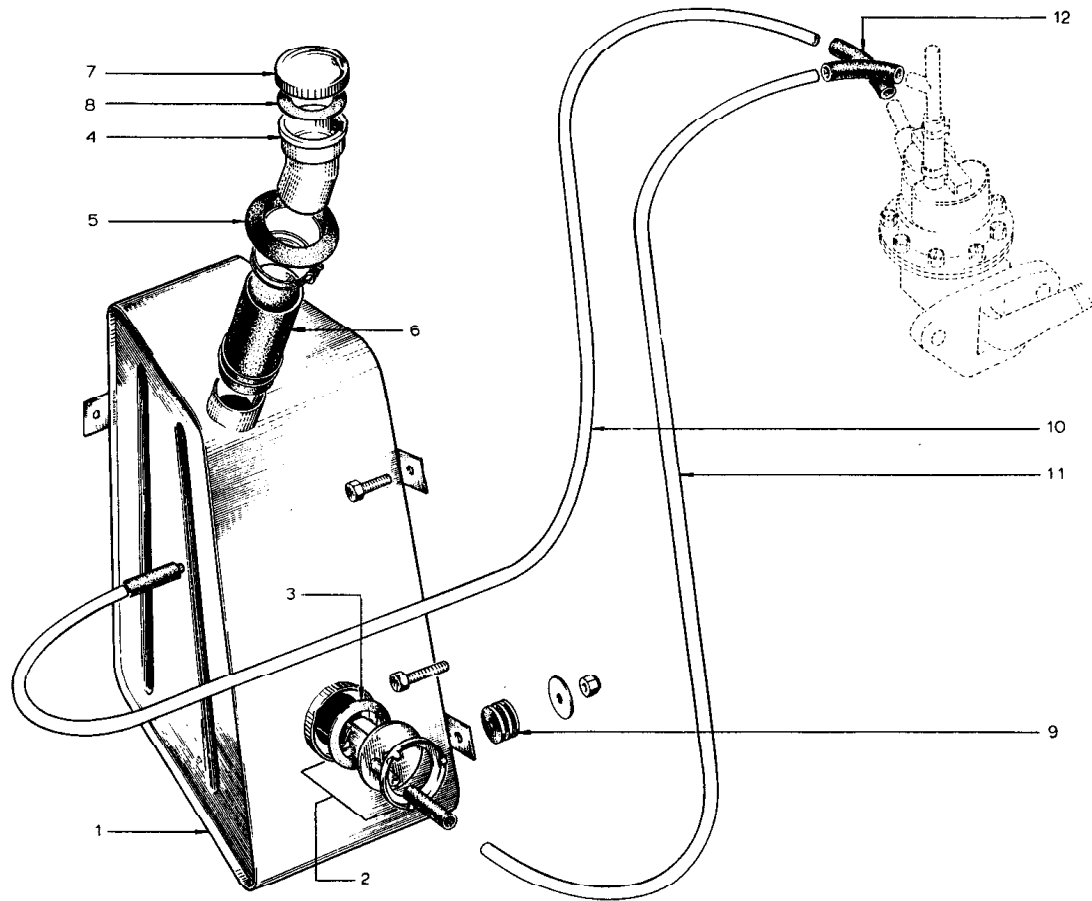


PLATE Ref: No.	PART No.	QUANTITY					STEERING		DESCRIPTION	CHANGE POINT	BULLETIN REFERENCE
		ALL	S1.	S1. Mk 1	S2.	S2. Fed.	RH	LH			
	046 L 0014		1	1							
LA.1.	054 L 0015				1	1			Fuel Tank		
	046 L 6000		1	1					Fuel Level Transmitter		
LA.2.	054 H 6008				1	1			Fuel Level Transmitter		
LA.3.	046 L 6004	1							Gasket - Fuel Level Transmitter		
	046 L 0705		1	1					Filler Neck		
LA.4.	054 L 0705				1	1			Filler Neck		
LA.5.	046 L 6001	1							Grommet - Filler Neck		
LA.6.	046 L 0003	1							Hose - Filler Neck to Tank		
	046 L 6003	2							Clip - Filler Neck Hose		
LA.7.	046 L 6002	1							Cap - Fuel Filler		
LA.8.	046 L 6005	1							Seal Ring - Fuel Filler Cap		
	054 B 6409				-	-			Replaced by A036 L 6019		
LA.9.	A036 L 6019				6	6			Rubber Washer - Fuel Tank Mounting		
	YUPN 050F		2	2					Nut)		
	A05 W 1606		2	2					Washer) Fuel Tank Mounting		
	XUPS 0310				1	1			Screw)		
	A03 W 1606				1	1			Washer) Fuel Tank Mounting, Rear Lug		
	YUPN 030F				1	1			Nut)		
	XUPS 0316				2	2			Screw)		
	A03 W 1606				2	2			Washer) Fuel Tank Mounting,		
	YUPN 030F				2	2			Nut) Top & Bottom Side Lugs		

PLATE Ref: No.	PART No.	QUANTITY					STEERING		DESCRIPTION	CHANGE POINT	BULLETIN REFERENCE
		ALL	ST.	ST. MK 1	S2.	S2. Fed.	RH	LH			
	XUFS 0310				1	1			Screw)		
	A03W 1606				1	1			Washer) Fuel Tank Mounting		
	YUPN 030F				1	1			Nut) Centre Side Lug		
	046 L 2000		1	1					Fuel Line - Feed		
LA.10.	054 L 2000				1	1			Fuel Line - Feed		
	046 L 2001		1	1					Fuel Line - Return		
LA.11.	054 L 2001				1	1			Fuel Line - Return		
LA.12.	046 L 6543	4							Sleeve - Fuel Line Connections		