

PA

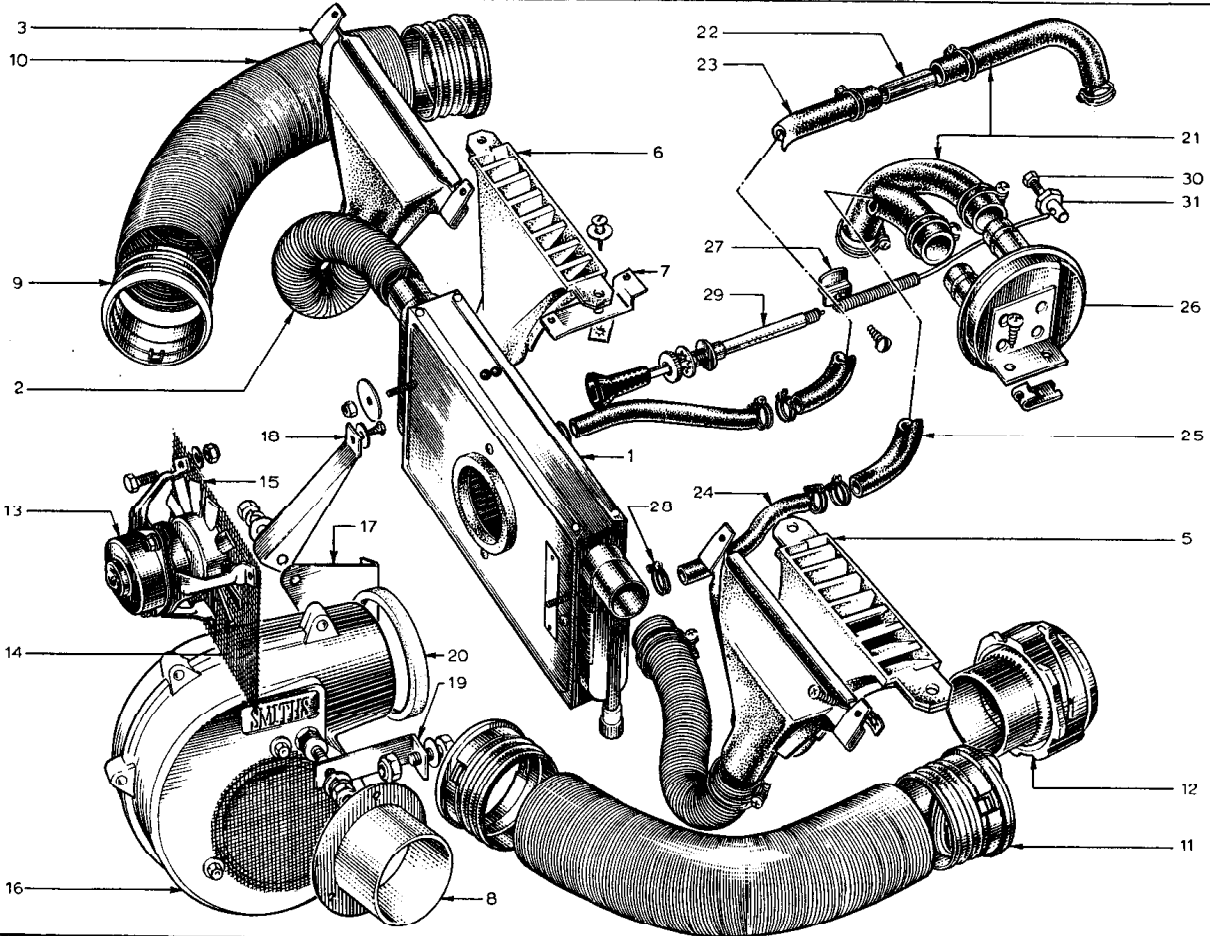


PLATE Ref. No.	PART No.	QUANTITY					STEERING		DESCRIPTION	CHANGE POINT	BULLETIN REFERENCE
		ALL	ST.	ST. Mk 1	SZ.	SZ. Fed.	RH	LH			
PA.1.	046 P 6002		1	1					Heater Unit		
	054 P 0706				1	1			Heater Unit		
	A03W 1606	2							Washer ) Heater Unit to Body		
	YUPM 100P	2							Nut )		
PA.2.	046 P 6009	2							Hose - Heater to Demist Nozzle	Up to Chassis No. 1456	
	036 P 0046				2	2			Hose - Heater to Demist Nozzle	From Chassis No. 1457	
	046 P 6010	4							Clip - Demist Nozzle Hose		
PA.3.	046 P 6001	2							Demist Nozzle	Up to Chassis No. 1456	
	050 B 6047				1	1			Demist Nozzle		
PA.5.	054 P 0063				1	1			Demist Nozzle	From Chassis No. 1457	
	050 B 6048				1	1			Demist Nozzle		
PA.6.	054 P 0064				1	1			Demist Nozzle	From Chassis No. 1457	
PA.7.	054 P 0071				4	4			Mounting Bracket - Demist Nozzle	From Chassis No. 1457	
	PSIS 0816				4	4			Screw )		
	A03W 1206				4	4			Washer ) Demist Nozzle to Mounting Bracket	From Chassis No. 1457	
	036 B 6002				4	4			Nut )		
	036 B 6035				8	8			Rivet - Mounting Bracket to Bulkhead	From Chassis No. 1457	
PA.8.	054 P 0059				2	2			Tube - Face Level Vent Connection		
PA.9.	046 P 0032	2	2						Tube - Face Level Vent Connection		
PA.10.	046 P 6006	2	2						Hose - Face Level Vent		
	054 P 0020				2	2			Hose - Face Level Vent		
PA.11.	046 P 0030	2	2						Face Level Vent		
PA.12.	046 B 6124				2	2			Face Level Vent		
PA.13.	046 M 6199	1	1	1					Heater Motor		
PA.14.	046 P 6000	1	1	1					Fan - Heater Motor		
PA.15.	054 B 1510				1				Grille - Fan Guard		
	054 B 1510					1			Grille - Fan Guard	Up to Chassis No. 1456	
12.70											

PLATE Ref: No.	PART No.	QUANTITY					STEERING		DESCRIPTION	CHANGE POINT	BULLETIN REFERENCE
		ALL	ST.	ST. Mk 1	S2.	S2. Fed.	RH	LH			
	XUPB 1012		3	3	3				Bolt )		
	XUPB 1012							3	Bolt )	Upto Chassis No. 1456	
	A03W 0806		3	3	3				Washer )		
	A03W 0806							1	Washer )	Upto Chassis No. 1456	
	YUPN 030F		3	3	3				Nut )		
	YUPN 030F							3	Nut )	Upto Chassis No. 1456	
	W 0050		3	3	3				Spacer )		
	W 0050							3	Spacer )	Upto Chassis No. 1456	
	046 M 6205							-	Replaced by A054 M 6082		
PA.16.	A054 M 6082							1	Heater Motor		
PA.17.	054 B 1667							1	Mounting Bracket - Heater Motor	From Chassis No. 1457	
PA.18.	054 B 1786							1	Mounting Bracket - Heater Motor	From Chassis No. 1457	
PA.19.	054 B 1666							1	Mounting Bracket - Heater Motor	From Chassis No. 1457	
	PSTS 0406							1	Screw )		
	A03W 0806							1	Washer )		
	XUPS 0412							3	Screw )	From Chassis No. 1457	
	A04W 1606							3	Washer )		
	YUPN 040F							3	Nut )		
PA.20.	026 B 0373							1	Seal	From Chassis No. 1457	
PA.21.	046 P 0022	2							Hose		
PA.22.	W 049	1							Connector Tube		
PA.23.	046 P 0006	1							Hose - Connector Tube to Transfer Pipe		
	046 P 0027		2	2					Hose )		
PA.24.	054 P 0057					2	2		Hose )	Transfer Pipe to Heater Unit	
PA.25.	046 P 0005	1							Hose - Heater Control Valve to Transfer Pipe		
PA.26.	046 P 6005	1							Heater Control Valve		
	PSTS 0812	2							Screw )		
	054 B 6015	2							Nut )	Heater Control Valve Mounting	
03.70											

